## features of your new air conditioner

### Cool Summer Offer

On those hot sweltering summer days and long restless nights, there is no better escape from the heat than the cool comforts of home. Your new air conditioner brings an end to exhausting hot summer days and lets you rest. This summer, beat the heat with your own air conditioner.

### Cost Efficient System

Your new air conditioner not only provides maximum cooling power in the summer, but can also be an efficient heating method in the winter with the advanced "Heat pump" system. This technology is up to 300% more efficient than electrical heating, so you can further reduce its running cost. Now, meet year-round needs with one air conditioner.

### A Look for Everywhere

The elegant and harmonious design gives priority to the esthetics of your space and complements any of your existing interior décor. With its soft color and rounded-edge shape, the new air conditioner adds class to any room. Enjoy what your air conditioner offers both functionally and esthetically.

### good'sleep function

good'sleep mode allows you to set a comfortable sleep temperature while saving energy and having sound sleep.

### SAMSUNG

For easy future reference write the model and serial number down. You will find your model number on the right side of the air conditioner.

Model #	
Serial #_	

## safety information

To prevent electric shock, disconnect the power before servicing, cleaning, and installing the air conditioner.

### SAFETY INFORMATION

Before using your new air conditioner, please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance.

Because the following operating instructions cover various models, the characteristics of your air conditioner may differ slightly from those described in this manual. If you have any questions, call your nearest contact center or find help and information online at www.samsung.com.

### Important safety symbols and precautions:

WARNING	Hazards or unsafe practices that may result in <b>severe</b> personal injury or death.
CAUTION	Hazards or unsafe practices that may result in <b>minor personal injury or property damage.</b>
CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your air conditioner, follow these basic safety precautions:
	Do NOT attempt.
<u> </u>	Do NOT disassemble.
<b>8</b>	Do NOT touch.
	Follow directions carefully.
<b>*</b>	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the contact center for help.
	Note.

These warning signs are here to prevent injury to you and others. Please follow them carefully.

After reading this section, keep it in a safe place for future reference.

## safety information

### **▲**SEVERE WARNING SIGNS



Do not place the air conditioner near hazardous substances or equipment that releases free flames to avoid fire, explosions or injuries.

• Potential risk of fire hazard or explosion.

Do not install the outdoor unit at an unstable place or elevated surface where there is potential risk of falling.

• If the outdoor unit falls, it may cause personal injury or loss of property.

Failure or damage may occur if any changes or modification that is not stated in the installation manual was performed. In this case, user will be responsible for the repair expenses.

Install the air conditioner away from direct exposure to sunlight, heating apparatus, and humid places.

 Hang curtains on windows to boost cooling efficiency and to avoid the risk of electric shock.

Do not cut the power plug and connect to a different power cable.

Do not yank the power cable and touch the power plug with hands.

• Potential risk of fire or electric shock.

Never use a damaged or dusted power plug, power cable, or loosened power receptacle.

Potential risk of fire or electric shock.

Install an exclusive circuit breaker and short-circuit breaker for the air conditioner.

Potential risk of electric shock or fire.

Do not insert anything such as fingers or branches into the air conditioner vents while the air conditioner is running.

• Keep the children away from the air conditioner to prevent them from putting their finger on the air conditioner. Potential risk of personal injury.

Ensure no water gets into the air conditioner.

- Potential risk or electric shock.
- If the water gets into the air conditioner, stop and unplug the power source immediately.

Turn off the air conditioner using the provided remote control or control accessory (if provided). Do not unplug to turn off the unit (unless there is an immediate danger).

Do not run the air conditioner for an extended period of time in a room with the door closed or with babies, elderly or disabled people.

• Open the door or windows to ventilate your room at least once an hour to prevent oxygen shortage.

The air conditioner is composed of moving parts. Keep children away from the unit to avoid physical injury.



### Make sure that children take precautions against access to the air conditioner and they do not play with the unit.

Do not clean the interior of air conditioner on your own.

- You may damage the parts which can cause electric shock or fire
- Consult contact center for cleaning the interior of the air conditioner.



### Do not Connect the air conditioner with heating apparatus or attempt to disassemble, remodel or repair it yourself.

 Potential risk of malfunction, electric shock or fire. If repairs are needed, consult the contact center.



### Consult the place of purchase or contact to install,reinstall or disassemble the aire conditioner.

- Improper installation carries a risk of unit malfunction, water leakage, electric shock or fire.
- If installing in specialty areas, such as a factory complex or saline coastal area, consult the place of purchase or contact center for specific installation
- The units must be installed according to distances declared, in order to permit accessibility from each side, either to guarantee correct operation of maintenance or repairing products. The unit's parts must be reachable and removable completely under safety condition (for people or things).

### Consult a dealer regarding the appropriate measures to prevent the allowable concentration from being exceeded.

 If the refrigerant leaks, and cause the concentration limit to be exceeded, hazards due to lack of oxygen in the room may result.

If the indoor unit gets wet, turn the power off immediately and call your nearest contact center.

Potential risk of fire or electric shock.

Always make sure that the power supply is compliant with current safety standards. Always install the air conditioner in compliance with current local safety standards.

Verify that the voltage and frequency of the power supply comply with the specifications and that the installed power is sufficient to ensure the operation of any other domestic appliance connected to the same electric lines.

Use a rated circuit breaker only.

 Never use steel wires or copper wires as a circuit breaker. It may cause fire or unit malfunctions.

Do not put undue stress or place heavy object on the power cable.

Do not bend the power cable excessively.

Potential risk of fire or electric shock.

To protect the product from water and possible shock, you should keep the power cable and the connection cord of the indoor and outdoor units in the protection tube.

When opening or closing the front panel, use a stable stool and watch your steps carefully.



Disconnect the air conditioner from power supply before it is repaired or disassembled.

Clean the air conditioner after the inner fan stops operating.

Potential risk of injury or electric shock.

### SEVERE WARNING SIGNS (CONT'D)



Use a receptacle that has a ground terminal. The receptacle must be used exclusively for the air conditioner.

• Improper electrical grounding may cause electric shock or fire.

Be sure to ground the unit. Do not connect the ground wire to gas or water pipes, lighting rods, or telephone grounding lines.

• If the unit is not properly grounded, electric shock may result.



If you smell burning plastic, hear strange sounds, or see smoke coming from the unit, unplug the air conditioner immediately and call a contact center.

Potential risk of fire or electric shock.

### **△CAUTION SIGNS**



 $\bigcirc$  Do not block or place items in front of the air conditioner. Do not step, hang onto, or place heavy items on the air conditioner.

Potential risk of personal injury.

If failure or damage occurs on the conditions of improper use not followed by the installation manual, there will be an extra labor charge for installing and construction.

• Potential risk of malfunction, electric shock or fire if repairs or installations are attempted by a non-qualified service technician.

Do not spray flammable gases such as insecticide near the air conditioner.

• Potential risk of electric shock, fire or unit malfunction.

Do not open the front grille during operation.

Potential risk of electric shock or unit malfunction.

Cool air should not flow directly towards people, pets, and plants.

• It is harmful to your health, pets, and plants.

Do not drink drain water coming out of the air conditioner.

Potential risk of health hazard.

Do not allow children to climb on the air conditioner.

Do not use the air conditioner as a cooling precision instrument for food, pets, plants, cosmetics or machinery.

Do not pull or give excessive shock to the air conditioner.

 Potential risk of fire, or unit malfunction and there are risk of personal injury because unit may fall down.

Do not spray water directly on the air conditioner or use benzene, thinner or alcohol to clean the surface of the unit.

- Potential risk of electric shock or fire.
- Potential risk of damage to the air conditioner.

Do not place any objects, especially containers with liquid.



Do not touch the pipe connected to the air conditioner.



Install the indoor unit away from lighting apparatus using the ballast.

• If you use the wireless remote control, reception error may occur due to the ballast of the lighting apparatus.

Install the outdoor unit where operating noise and vibration will not disturb your neighbor and in a well-ventilated area with no obstacle.

- Potential risk of malfunction.
- Operating noise may disturb your neighbor.

Make sure that there are no obstacles or covers that block the air conditioner.

Allow sufficient space for air circulation.

Insufficient ventilation may result in poor performance.

If the power cable is damaged, the manufacturer or a qualified service technician must replace it.

If a power outage occurs while the air conditioner is working, turn off the power source immediately.

Max current is measured according to IEC standard for safety and current is measured according to ISO standard for energy efficiency.

Check for damage on delivery. If damaged, do not install the air conditioner and call the place of purchase immediately.

Keep indoor temperatures stable and not extremely cold, especially where there are children, elderly or disabled people.

The packaging material and used batteries of the remote controller (optional) must be disposed of in accordance with the national standards.

The refrigerant used in the air conditioner must be treated as chemical waste. Dispose the refrigerant following national standards.

Have a qualified service technician install the air conditioner and perform a trial operation.

Firmly connect the drain hose to the air conditioner for proper water drainage.

Check for damages on the outdoor unit installation pad at least once a vear.

Potential risk of personal injury or property loss.

When using a wireless remote control, the distance should not be more than 7 meters from the air conditioner.

If the remote control is not used for a long period of time, remove the batteries to prevent leakage of electrolyte.

When cleaning the outdoor unit, touch the heat exchanger radiator fins with extreme care.

Wearing thick gloves can protect your hands.

Make sure that the condensed water dripping from the drain hose runs out properly and safely.

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety: Young children should be supervised to ensure that they do not play with the appliance.

### CAUTION SIGNS (CONT'D)

Inspect the condition, electric connections, pipes and external case of the air conditioner regularly by a qualified service technician.

Do not open doors and windows in the room being cooled during operation unless necessary.

Do not block the air conditioner vents. If objects block the air flow, it may cause unit malfunction or poor performance.

Make sure there are no obstacles under the indoor unit.

Potential risk of fire or loss of property.

The air conditioner should be used only for the applications for which it has been designed: the indoor unit is not suitable to be installed in areas used for laundry.

Our units must be installed in compliance with the spaces indicated in the installation manual to ensure either accessibility from both sides or ability to perform routine maintenance and repairs. The units' components must be accessible and that can be disassembled in conditions of complete safety either for people or things.

For this reason, where it is not observed as indicated into the Installation Manual, the cost necessary to reach and repair the unit (in safety, as required by current regulations in force) with slings, trucks, scaffolding or any other means of elevation won't be considered in-warranty and charged to end user.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



Ensure the off-on and protection switches are properly installed.

Do not use the air conditioner if damaged. If problems occur, immediately stop operation and disconnect the plug from the power supply.

If the air conditioner will not be used for an extended period of time (for example, over several months), unplug the power from the wall.



Call the place of purchase or a contact center if repairs are needed.

 Potential risk of fire or electric shock if disassembly or repairs are attempted by a non-qualified service technician.

If you smell burning plastic, hear strange sounds, or see smoke coming from the unit, unplug the air conditioner immediately and call a contact center.

Potential risk of fire or electric shock.

### contents

## VIEWING YOUR AIR CONDITIONER

- 10 Checking the indoor unit and display
- 10 Main parts
- 10 Display
- 11 Removing the front panel
- 11 Power button and Room temperature sensor
- 12 Remote controller buttons
- 13 Remote controller indicators

### **OPERATING BASIC FUNCTION**

- 14 Selecting operation mode
- 14 Auto
- 14 Cool
- 14 Drv
- 14 Fan
- 14 Heat

### **USING ADVANCED FUNCTIONS**

- 16 Turbo operation
- 16 Air swing
- 17 good'sleep operation
- 18 Setting the On/Off timer

### CLEANING AND MAINTAINING THE AIR CONDITIONER

- 19 Cleaning the exterior
- 19 Cleaning the filter
- 19 Air filter
- 20 Bio filter
- 21 Replacing the filter
- 21 Deodorizing filter
- 22 Maintaining your air conditioner
- 22 Periodical checks
- 23 Internal protections via the unit control system

### APPENDIX

24 Troubleshooting

25 Operation ranges



26 Installation part





### Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

### (Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

For information on Samsung's environmental commitments and product specific regulatory obligations e.g. REACH visit: samsung.com/uk/aboutsamsung/samsungelectronics/corporatecitizenship/data\_corner.html

## viewing your air conditioner



• Please cover the air conditioner with PE BAG after installation, and remove it when you start to run air conditioner.


Congratulations on the purchase of the air conditioner. We hope you enjoy the features of your air conditioner and stay cool or warm with optimal efficiency.

Please read the user manual to get started and to make the best use of the air conditioner.

### CHECKING THE INDOOR UNIT AND DISPLAY

Carefully unpack your air conditioner, and check the unit to make sure it is not damaged.

### Main parts

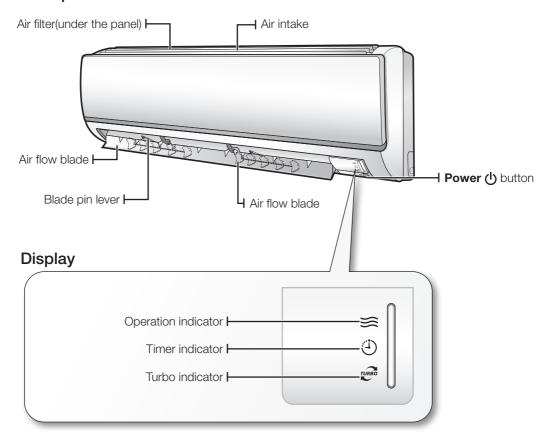


 $\mathbb{Z}$ 

Your air conditioner may slightly look different from illustration shown above depending on your model.

### REMOVING THE FRONT PANEL


Tightly grab both side of the front panel and lift up the panel to open. Then slide the panel towards to remove the panel.

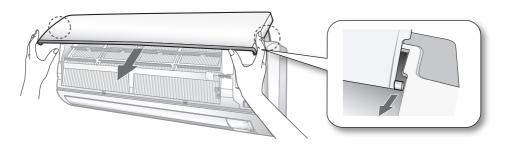

### Power button and Room temperature sensor

You may locate the **Power** (b) button on the right bottom side of the air conditioner. If the front panel is open, you can check the room temperature sensor.

You can turn on the air conditioner without the remote control by pressing the **Power ()** button. The room temperature sensor measures indoor room temperature.

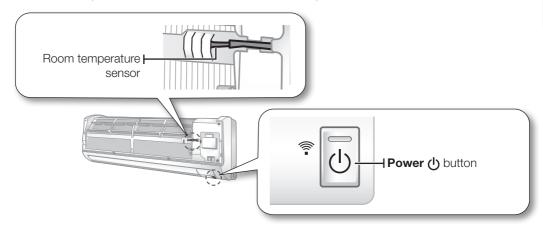


## viewing your air conditioner


- Point the remote controller towards the remote controller receiver of the indoor unit.
- When you properly press the button on the remote controller, you will hear beep sound from the indoor unit and a transmit indicator(\*\*) appears on the remote controller display.

### REMOTE CONTROLLER BUTTONS

Carefully unpack your air conditioner, and check the unit to make sure it is not damaged.

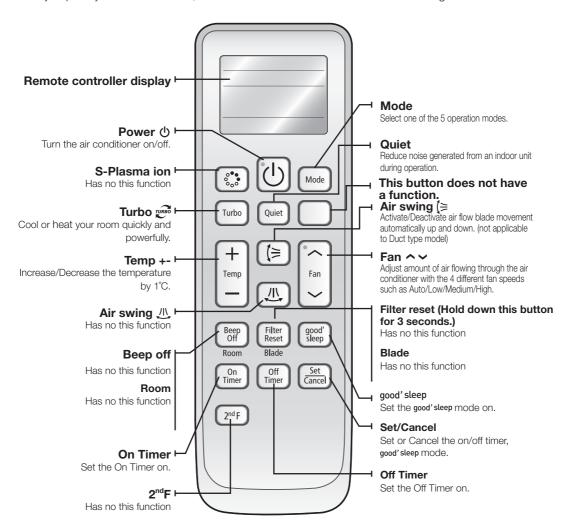

### REMOTE CONTROLLER INDICATORS

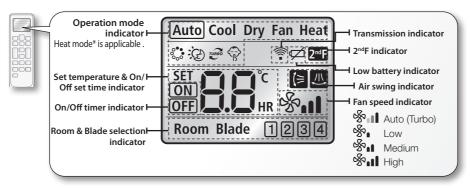

### Battery changing time


When the battery is exhausted, (

) will be displayed in the remote controller display. When the icon appears, change the batteries. The remote controller requires two 1.5V AAA type batteries.

### Storing the remote controller

When you do not use the remote controller for long time, remove the batteries from the remote controller and store it.

### Inserting the batteries

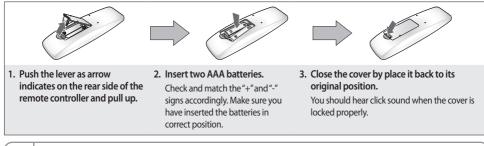



• Make sure that water is not allowed to enter the remote controller.



- There is a possibility that the air conditioner will not operate by remote controller near strong light such as a fluorescent lamp or neon sign. In this case, use the remote controller in front of the remote controller receiver of the indoor unit.
- If other electrical products are operated by the remote controller, call your nearest service center.
- To silence the beep sound, press the **Beep off** button. When you press the **Beep off** button again, the beep sound will ring again.



### Correct Disposal of Batteries in This product

### (Applicable in countries with separate collection systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

## Operating basic function

### **SELECTING OPERATION MODE**

Basic operation is an operation mode that can be selected by pressing the **Mode** button.

### Auto

In Auto mode, the air conditioner will automatically set the temperature and fan speed to maintain your fresh environment.

• When the indoor temperature is too high, the powerful cool breeze is generated and when the indoor becomes cool enough, the soft breeze is generated.

### Cool

Cool mode is frequently used and you can freely control the temperature, fan speed, and air flow direction in cool mode.

When you select heat mode while the cool mode is on, the cool mode is canceled.

### Dry

The air conditioner in Dry mode acts like a dehumidifier by removing moisture from the indoor air.

### Fan

In Fan mode, you can ventilate your room and fan operation will help provide your fresh environment.

### Heat

In heat mode, you can warm your room even in the fall and winter

- The fan may not commence immediately to avoid generating a cold breeze.
- Defrost Indicator (\*\( )
  - The defrost indicator will be on when the frost is being removed during the heat operation and when the defrost function is completed, the defrost indicator will be off.
- If you stop operating the air conditioner after heating operation, the fan will continue for some time to cool the unit.
- If you select cool mode during the heat mode, the heat mode is canceled.

### Press the button to turn on the air conditioner.

### Press the Mode button to set the operating mode.

- Each time you press the **Mode** button, the mode will change in order of Auto, Cool, Dry, Fan and Heat.
- Heat mode operates only with MR-DH00 model.



## Press the sutton to set the desired fan speed.

Auto	Sell (Auto)
Cool	% 11 (Auto), % 1 (Med), % 11 (High)
Dry	%₁1 (Auto)
Fan	% (Low), % 1 (Med), % 1 (High)
Heat	% 11 (Auto), % 1 (Med), % 11 (High)

## Press the + button to adjust the desired temperature.

Auto	You can adjust the desired temperature by 1°C(1°F) within the range of 18°C~30°C(65°F~86°F).
Cool	You can adjust the desired temperature by 1°C(1°F) within the range of 18°C~30°C(65°F~86°F).
Dry	You can adjust the desired temperature by 1°C(1°F) within the range of 18°C~30°C(65°F~86°F).
Fan	Temperature adjustment is not possible.
Heat	You can adjust the desired temperature by 1°C(1°F) within the range of 16°C~30°C(61°F~86°F).

## Using advanced function

### Turbo operation

Turbo function will be helpful to cool or heat your room quickly and effectively.

Press the Turbo button on the remote controller in the Cool/Heat mode.





- Turbo indicator appears(2000) on the remote controller display and the air conditioner operates in Turbo function for 30 minutes.
- If you press the **Turbo** button again, the Turbo operation is canceled.
  - ↓ Turbo function is only available in the Cool/Heat mode.
  - If you select the Turbo operation during the Quiet operation, the Quiet operation is canceled.
    - You can adjust the air flow direction Up/Down or Left/Right.
    - You cannot adjust the set temperature and fan speed.




### Air swing

This function allows you to shift the air flow direction up and down or left and right.

Press () or UN button to move the air flow direction up and down or left and right while the air conditioner is on.



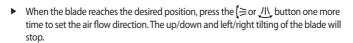



### good' sleep operation

For a comfortable sleep, the air conditioner will operate in Fall asleep  $\triangleright$  Sound sleep  $\triangleright$  Wake up from good' sleep mode.


### When the air conditioner is on and in cool mode.





- 1. Press the good'sleep button on the remote controller to select the good'sleep operation.
  - ▶ good' sleep indicator appears and off timer indicator starts blinking on the remote controller display.
- 2. Press the good' sleep button repeatedly to set off time
  - ► You can set the time in half hourly units from 30minute ~ 3hours and hourly units from 3hour ~ 12hours
  - ▶ The operation hour can be set to minimum 30minutes and maximum 12hours.
  - ▶ Default operation hour is set to 8hours.
- 3. Press the Set/Cancel button to active it.
  - ▶ Off timer indicator stops blinking and set time will be displayed.
  - ▶ If you don't press **Set/Cancel** button to start the good' sleep operation within 10 seconds, the operation is canceled so you should check the Off indicator on the remote controller display.

### **Cancel** Press the **Set/Cancel** button once again.

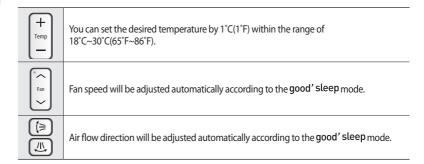

### Temperature and fan speed changes in good' sleep mode

- 1. Fall asleep mode: Provides you with comfortable environment for a good sleep by rapid cooling and hypnagogue expedition breeze.
- Sound sleep mode: The sound sleep mode adjust temperature and air flow in wave to maintain healthy skin temperature while it aids deep sleep. According to the change of good' sleep operation hours, the sound sleep hour can be longer or shorter.
- 3. Wake up from good' sleep mode: Provides you with the air flow that adjusts your body temperature to wake you up in a fresh status.



- The recommended set temperature is 25°C~27°C(77°F~81°F) and 26°C(79°F) is the most ideal temperature.
  - If the set temperature is too low, you may feel cold or dry and catch a cold.
- You may not have such a restful sleep if the good' sleep is set too short or long because the default is set to 8-hour-operation.
- If the good' sleep mode is set less than 4hours, the operation will stop after the set hours. If the good' sleep mode is set over 5 hours, it will run as Wake up stage from the last one hour before it stops automatically.
- If you press **Turbo, Mode, Quiet** button during the good' sleep operation, the good' sleep operation is canceled and the selected operation starts.
- Only the latest setting timer will be applied between the On Timer/Off Timer and good'sleep off timer functions.
- You can set the S-Plasma ion function during the good' sleep operation.

## Using advanced function

### Setting the On/Off timer

You can set the air conditioner to turn on/off automatically at desired time.

Setting On timer while the air conditioner is off / Off timer while the air conditioner is on.

### Setting On timer





- ▶ (On) / (Off) timer indicator will blink on the remote controller display.
- 2. Press On timer or Off timer button repeatedly to set the time.
  - ► You can set the time in half hourly units from 30minute ~ 3hours and hourly units from 3hour ~ 24hours
  - ▶ The set hour is set to minimum 30minutes and maximum 24hours.
- 3. Press Set/Cancel button to activate it.
  - ▶ (On) / (Off) indicators will stop blinking and the set time will be displayed.
  - ▶ If you don't press **Set/Cancel** button within 10 seconds after selecting the on timer or off timer button, the air conditioner will return to the previous status, so you should check the (On) or (Off) indicator on the remote controller display.



### Cancel Press the Set/Cancel button once again.

### Setting Off timer







You can select from (Auto)  $\triangleright$  (Cool)  $\triangleright$  (Dry)  $\triangleright$  (Fan)  $\triangleright$  (Heat). (Heat mode is applicable to MR-DH00/DH00U model only.)



You can adjust the temperature in Auto/Cool/Dry/Heat mode However, you cannot adjust the temperature in fan mode. (Heat mode is applicable to MR-DH00/DH00U model only.)



- Only the latest setting timer will be applied between the On Timer/Off Timer and good' sleep off timer functions.
- About 10 seconds after setting the On timer, only the set time will be displayed on the remote controller.



### Setting On timer and Off timer simultaneously

If the air conditioner is On

Preset time on On timer is shorter than Off timer

Ex) On timer: 3 hours, Off timer 5 hours

- The air conditioner will turn on after 3 hours from the moment you have set the timer.

Your air conditioner will remain on for 2 hours and then turn off automatically.

If the air conditioner is Off

Preset time on On timer is longer than Off timer

Ex) On timer: 3 hours, Off timer: 1 hour

- The air conditioner will be turned off after 1 hour from the moment you have set the timer.

After 2 hours, your air conditioner will turn on.



- On timer and Off timer setting time should be different from each other.
- If you press **Set/Cancel** button or **Power** button while the both on timer and off timer are set simultaneously, the functions of both on timer and off timer are canceled at the same time.


## cleaning and maintaining the

### CLEANING THE EXTERIOR

1. Wipe the surface of the unit with a slightly wet or dry cloth when needed.



Do not use Benzene, Thinner or Clorox $^{\text{TM}}$ . They may damage the surface of the air conditioner and can create a risk of fire.

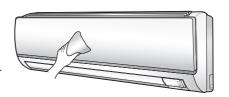

### CLEANING THE FILTER

When cleaning the filter, make sure to unplug the power from the unit. No special tools are needed to clean it.

### Air filter

Washable foam based air filter captures large particles from the air. The filter is cleaned with a vacuum or by hand washing.


1. Remove the front panel.

Tightly grab both side of the front panel and lift up the panel to open. Then slide the panel towards you to remove the panel.

2. Grab the handle and lift it up. Then, pull the Air filter towards you.



3. Clean the Air filter with a vacuum cleaner or soft brush. If dust is too heavy, then rinse it with running water and dry it in a ventilated area.

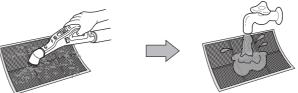




- For the best conditions, repeat every two weeks.
- If the Air filter dries in a confined(or humid) area, odors may generate. If it occurs, re-clean and dry it in a well-ventilated area.
- 4. Insert the Air filter back in its original position.
- 5. Close the front panel.

## cleaning and maintaining the air conditioner


### Bio filter

Washable foam based Bio filter leads to reduction in allergens that thrive in polluted air. The filter is cleaned with a vacuum or by hand washing.

1. Remove the front panel.

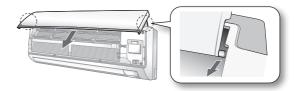

Tightly grab both side of the front panel and lift up the panel to open. Then slide the panel

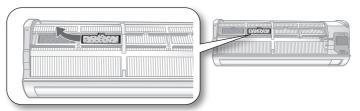



towards you to remove the panel.

2. Slide the Bio filter(color in sky-blue) out to remove it from the slot.



- Bio filter can be placed in any 4 slots beneath the air filter.
- Front panel of your air conditioner is actually not detachable.



Clean the Bio filter with a vacuum cleaner or soft brush. Then rinse it with running water and dry it in a ventilated area.

- 4. Install the Bio filter back in position.
- 5. Close the front panel.

Clean the Bio filter every 3 months. The cleaning term may differ on usage and environmental conditions.

### REPLACING THE FILTER

Replacement filter may be purchased from the retail store or ordered from the dealer where you purchased the unit. If you cannot find one, please call a contact center.

### **Deodorizing filter**

Deodorizing filter absorbs efficiently cigarette smoke, pet odors and other unpleasant smells. Deodorizing filter cleaning is simple, just remove old filter and install a new one.

1. Remove the front panel.

Tightly grab both side of the front panel and lift up the panel to open. Then slide the panel towards you to remove the panel.


2. Slide the Deodorizing filter(color in black) out to remove it from the slot.



- Deodorizing filter can be placed in any 4 slots beneath the air filter.
- Front panel of your air conditioner is actually not detachable.



3. Install the new Deodorizing filter back in position.

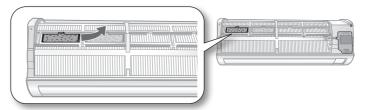

4. Close the front panel.



- The replacement timing of the Deodorizing filter differs depending on usage and environmental conditions.
- Even if Deodorizing and Bio filters are installed in an inverted position, it will not affect its filtration system.

## cleaning and maintaining the

### MAINTAINING YOUR AIR CONDITIONER

If the air conditioner will not be used for an extended period of time, dry the air conditioner to maintain it in best condition.

- 1. Dry the air conditioner thoroughly by operating in Fan mode for 3 to 4 hours and disconnect the power plug. There may be internal damage if moisture is left in components.
- 2. Before using the air conditioner again, dry the inner components of the air conditioner again by running in Fan mode for 3 to 4 hours. This helps remove odors which may have generated from dampness.

### Periodical checks

Refer to the following chart to maintain the air conditioner properly.

Туре	Description	Monthly	Every 4 months	Once a year
	Clean the air filter (1)	•		
	Clean the condensate drain pan (2)			•
Indoor unit	Thoroughly clean the heat exchanger (2)			•
	Clean the condensate drain pipe (2)		•	
	Replace the remote control batteries (1)			•
	Clean the heat exchanger on the outside of the unit (2)		•	
	Clean the heat exchanger on the inside of the unit (2)			•
	Clean the electric components with jets of air (2)			•
Outdoor unit	Verify that all the electric components are firmly tightened (2)			•
	Clean the fan (2)			•
	Verify that all the fan assembly is firmly tightened (2)			•
	Clean the condensate drain pan (2)			•



The checks and maintenance operations described are essential to guarantee the efficiency of the air conditioner. The frequency of these operations varies according to the characteristics of the area, the amount of dust, etc.

- (1) The described operations should be performed more frequently if the area of installation is very dusty.
- (2) These operations must always be performed by qualified personnel. For more detailed information, see the Installation Manual.

### MAINTAINING YOUR AIR CONDITIONER

### Internal protections via the unit control system

This internal protection operates if an internal fault occurs in the air conditioner.

Туре	Description
Against cold air  The internal fan will be off to against cold air when the heating.	
De-ice cycle  The internal fan will be off to against cold air when the heating.	
Anti-protection of internal battery  The compressor will be off to protect internal battery who conditioner operates in Cool mode.	
Protect compressor	The air conditioner does not start operating immediately to protect the compressor of the outdoor unit after it has been started.



ባ If the heat pump is operating in Heat mode, De-ice cycle is actuated to remove frost from an outdoor unit that may have deposited at low temperatures.

The internal fan is switched off automatically and restarted only after the de-ice cycle is completed.

When de-ice cycle is operating, it may make strange sound. It is normal operation for the product safety.



### **TROUBLESHOOTING**

Refer to the following chart if the air conditioner operates abnormally. This may save time and unnecessary expenses.

PROBLEM	SOLUTION	
The air conditioner does not operate immediately after it has been restarted.	Because of the protective mechanism, the appliance does not start operating immediately to keep the unit from overloading.  The air conditioner will start in 3 minutes.	
The air conditioner does not work at all.	<ul> <li>Check that the power plug is properly connected. Insert the power plug into the wall socket correctly.</li> <li>Check if the circuit breaker is switched off.</li> <li>Check if there is a power failure.</li> <li>Check your fuse. Make sure it is not blown out.</li> </ul>	
The temperature does not change.	Check if you selected Fan mode.  Press the <b>Mode</b> button on the remote control to select another mode.	
The cool(warm) air does not come out of the air conditioner.	<ul> <li>Check if the set temperature is higher(lower) than the current temperature. Press the Temperature ▲ or ▼ button on the remote control to change the set temperature. Press the Temperature ▲ or ▼ button to increase or decrease the temperature.</li> <li>Check if the air filter is blocked by dirt. Clean the Air filter every two weeks.</li> <li>Check if the air conditioner has just been turned on. If so, wait 3 minutes.</li> </ul>	
The fan speed does not change.	Check if you selected Auto or Dry mode.     The air conditioner automatically adjusts the fan speed to Auto in Auto/Dry mode.	
Timer function does not set.	• Check if you press the <b>Power () &amp; Set/Cancel</b> button on the remote control after you have set the time.	
Odors permeate in the room during operation.	Check if the appliance is running in a smoky area or if there is a smell entering from outside. Operate the air conditioner in Fan mode or open the windows to air out the room.	
The air conditioner makes a bubbling sound.	A bubbling sound may be heard when the refrigerant is circulating through the compressor. Let the air conditioner operate in a selected mode.	
Water is dripping from the air flow blades.	Check if the air conditioner has been cooling for an extended period of time with the air flow blades pointed downwards. Condensation may generate due to the difference in temperature.	
Remote control is not working.	<ul> <li>Check if your batteries are depleted.</li> <li>Make sure batteries are correctly installed.</li> <li>Make sure nothing is blocking your remote control sensor.</li> <li>Check that there are strong lighting apparatus near the air conditioner. Strong light which comes from fluorescent bulbs or neon signs may interrupt the electric waves.</li> </ul>	



If the outdoor temperature is too low when heat mode is operating, special operation will operate and it may make strange sound. It is normal operation for the product safety.

### **OPERATION RANGES**

The table below indicates the temperature and humidity ranges the air conditioner can be operated within. Refer to the table for efficient use.

MODE	OPERATIONAL TEMPERATURE		INDOOR HUMIDITY	IF OUT OF CONDITIONS	
MODE	INDOOR OUTDOOR		INDOOR HUMIDITY		
COOLING	16°C to 32°C	-5°C to 48°	80% or less	Condensation may occur on the indoor unit with risk to have either water blow off or drops on the floor.	
HEATING	27°C or less	-20°C to 24°C	-	Internal protection triggers and the air conditioner will stop.	
DRYING	16°C to 32°C	-5°C to 48°C	-	Condensation may occur on the indoor unit with risk to have either water blow off or drops on the floor.	

The standardized temperature for heating is 7°C. If the outdoor temperature drops to 0°C or below, the heating capacity can be reduced depending on the temperature condition. If the cooling operation is used at over 32°C(indoor temperature), it does not cool at its full capacity.

### Model specification (Dimension and weight)

Dimension and weight				
Туре	Model	Net dimension (WxDxH) (mm)	Net weight (kg)	
	AM015HNTDEH/EU	825*285*189	8.5	
	AM022FNTDEH/EU	825*285*189	8.5	
	AM028FNTDEH/EU	825*285*189	8.5	
	AM036FNTDEH/EU	825*285*189	8.5	
	AM045FNLDEH/EU	1065*298*218	12.5	
	AM071FNTDEH/EU	1065*298*218	12.5	
Indoor unit	AM015HNQDEH/EU	825*285*189	8.8	
	AM022FNQDEH/EU	825*285*189	8.8	
	AM028FNQDEH/EU	825*285*189	8.8	
	AM036FNQDEH/EU	825*285*189	8.8	
	AM045FNQDEH/EU	1065*298*218	13	
	AM056FNQDEH/EU	1065*298*218	13	
	AM071FNQDEH/EU	1065*298*218	13	


### **Installation Part**

### **Fixing the Installation Plate**

Before fixing the installation plate to the wall or window frame, you must determine the position of the 65mm hole through which the cable, pipe and hose pass to connect the indoor unit to the outdoor unit.

When facing the wall, the pipe and cable can be connected from the:


- ♠ Right
- Left
- Underside(right)
- ◆ Rear(right or left)

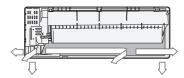


 Determine the position of the pipe and drain hose hole as seen in the picture and drill the hole with an inner diameter of 65mm so that it slants slightly downwards.

2.	If you fix the indoor unit to a	Follow step(s)	
	Wall	3.	
	Window frame	4 to 6.	

- **3.** Fix the installation plate to the wall giving attention to the weight of the indoor unit.
  - If you mount the plate to a concrete wall with anchor bolts, the anchor bolts must not project more than 20mm.
- **4.** Determine the positions of the wooden uprights to be attached to the window frame.
- **5.** Attach the wooden uprights to the window frame giving attention to the weight of the indoor unit.
- **6.** Attach the installation plate to the wooden uprights using tapping screws as seen in the picture.

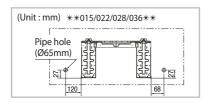

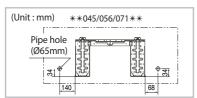

### **Performing Leak Test & Insulation**


### Leak test

### LEAK TEST WITH NITROGEN(before opening valves)

In order to detect basic refrigerant leaks, before recreating the vacuum and recirculating the R410A, it's responsible of installer to pressurize the whole system with nitrogen(using a pressure regulator) at a pressure above 4.1MPa(gauge).

### LEAK TEST WITH R410A(after opening valves)

Before opening valves, discharge all the nitrogen into the system and create vacuum. After opening valves check leaks using a leak detector for refrigerant R410A.

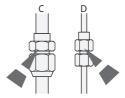

\* The designs and shape are subject to change according to the model.




Discharge all the nitrogen to create a vacuum and charge the system.

### Insulation

After checking for gas leaks in the system, insulate the pipe, hose and cables. Then place the indoor unit on the installation plate.

- To avoid condensation problems, place heat-resistant polyethylene foam separately around each refrigerant pipe in the lower part of the indoor unit.
- 2. Wrap the refrigerant pipe and the drain hose in the rear of the indoor unit with the absorbent pad.
  - Wind the pipe and hose three times to the end of the indoor unit with the absorbent pad. (20mm interval)
- **3.** Wind the pipe, assembly cable and drain hose with insulation tape.
- 4. Place the bundle(the pipe, assembly cable and drain hose) in the lower part of the indoor unit carefully so it doesn't project from the rear of the indoor unit.
- **5.** Hook the indoor unit to the installation plate and move the unit to the right and left until it is securely in place.
- 6. Wrap the rest of the pipe with vinyl tape.

7. Attach the pipe to the wall using clamps(optional).

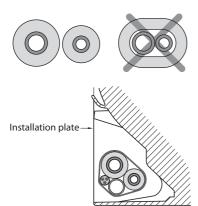


- 8. Select the insulation of the refrigerant pipe.
  - Insulate the gas side and liquid side pipe referring to the thickness according to the pipe size.
  - The thickness according to the pipe size is a standard of the indoor temperature of 27°C and humidity of 80%. If installing in an unfavorable conditions, use thicker one.
  - Insulator's heat-resistance temperature should be more than 120°C.

Pipe size	Minimum thickness of insulation (mm)		
(mm)	PE foam	EPDM foam	Remarks
Ø6.35~Ø15.88	13	10	If you install the pipe underground, at the seaside, a spa or on the lake, use 1 grade
-	25	19	thicker one according to the pipe size.




- Install the insulation not to get wider and use the adhesives on the connection part of it to prevent moisture from entering.
- Wind the refrigerant pipe with insulation tape if it is exposed to outside sunlight.
- Install the refrigerant pipe respecting that the insulation does not get thinner on the bent part or hanger of pipe.
- Add the additional insulation if the insulation plate gets thinner.

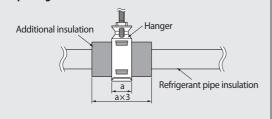


## Installing and Connecting the Drain Hose of the Indoor Unit


When installing the drain hose for the indoor unit, check if condensation draining is adequate.
When passing the drain hose through the 65mm hole drilled in the wall, check the following:

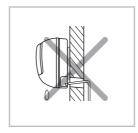


The hose must NOT slant upwards.

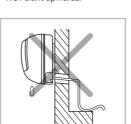


Do NOT bend the hose in different directions.

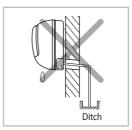

Do NOT place the end of the drain hose in a hollow.

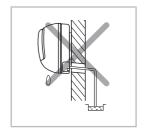


The end of the drain hose must NOT be placed under water.

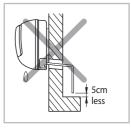

Keep a clearance of at least 5cm between the end of the hose and the ground.

### Drain hose installation

1. If necessary, connect the 2 meter extension drain hose to the drain hose.

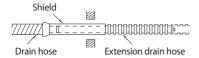


- If you use the extension drain hose, insulate the inside of the extension drain hose with a shield.
- **3.** Fit the drain hose into 1 of 2 drain hose holes, then fix the end of the drain hose tightly with a clamp.
  - If you don't use the other drain hose hole, block it with a rubber stopper.
- Pass the drain hose under the refrigerant pipe, keeping the drain hose tight.
- **5.** Pass the drain hose through the hole in the wall. Check if it slants downwards as seen in the picture.
  - \* The hose will be fixed permanently into position after finishing the installation and the gas leak test.
  - \*\* DO NOT WALL UP THE DRAIN HOSE CONNECTION! Drain hose connection must be easy accessible and serviceable.


### **Changing Direction of the Drain Hose**

You can select the direction of the drain hose, depending on where you want to install the indoor unit.

1. Detach the rubber cap with the flyer.

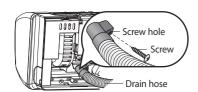

- 2. Detach the drain hose by pulling it and turning to the left.
- Insert the drain hose by fixing it into the groove of the drain hose and the outlet of the drain pan.
- **4.** Attach the rubber cap with a screwdriver by turning it to the right until it fixes to the end of the groove.

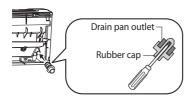


### **Wiring Work**

### Power and communication cable connection

- 1. Before wiring work, you must turn off all power source.
- 2. Indoor unit power should be supplied through the breaker(ELCB or MCCB+ELB) separated by the outdoor power.

ELCB: Earth Leakage Circuit Breaker MCCB:Molded Case Circuit Breaker ELB:Earth Leakage Breaker

- 3. The power cable should be used only copper wires.
- **4.** Connect the power cable{1(L), 2(N)} among the units within maximum length and communication cable(F1, F2) each.
- **5.** Connect F3, F4(for communication) when installing the wired remote Control.

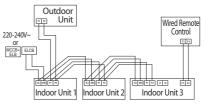


★ ELCB: Essential Installation

WARNING

Power off before connecting any wires; Indoor PBA will be damaged while V1,V2,F3,F4 short each other.

★ Don't connect the EEV kit to this model. (AM\*FNQD\*)

### Selecting compressed ring terminal

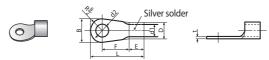

Normina	I Norminal B		3	]		d	1	E	F	L	d	2	t
for cable (mm²)		Standard dimension (mm)	Allowance (mm)	Standard dimension (mm)		Standard dimension (mm)	Allowance (mm)	Min.	Min.	Max.	Standard dimension (mm)	Allowance (mm)	Min.
1.5	4	6.6	±0.2	3.4	+0.3	1.7	±0.2	4.1	6	16	4.3	+0.2	0.7
1.5	4	8	±0.2	3.4	-0.2	'./	_±0.2	7.1	١	10	7.5	0	0.7
2.5	4	6.6	.02	4.2	+0.3	2.3	±0.2	6		17.5	4.2	+0.2	0.8
2.5	4	8.5	±0.2	4.2	-0.2	2.3	±0.2	٥	6	17.5	4.3	0	0.8
4	4	9.5	±0.2	5.6	+0.3 -0.2	3.4	±0.2	6	5	20	4.3	+0.2 0	0.9

### Specification of electronic wire

Power supply	МССВ	ELB or ELCB	Power cable	Earth cable	Communication cable
Max : 242V Min : 198V	ХA	X A, 30mmA 0.1 s	2.5mm <sup>2</sup>	2.5mm <sup>2</sup>	0.75~1.5mm²

- Decide the capacity of ELCB(or MCCB+ELB) by below formula.
- Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord. (Code designation IEC:60245 IEC 57 / CENELEC: H05RN-F or IEC:60245 IEC 66 / CENELEC: H07RN-F)

The capacity of ELCB(or MCCB+ELB) X [A] = 1.25 X 1.1 X  $\Sigma$ Ai

- \* X: The capacity of ELCB(or MCCB+ELB).
- \*  $\Sigma$ Ai : Sum of Rating currents of each indoor unit.
- \* Refer to each installation manual about the rating current of indoor unit.
- ◆ Decide the power cable specification and maximum length within 10% power drop among indoor units.




- \* Coef: 1.55
- \* Lk: Distance among each indoor unit[m],
  Ak: Power cable specification[mm<sup>2</sup>], ik: Running current of each unit[A]

### Setting an indoor unit address and installation option

Set the indoor unit address and installation option with remote controller option.

Set the each option separately since you cannot set the ADDRESS setting and indoor unit installation setting option at the same time. You need to set twice when setting indoor unit address and installation option.

### The procedure of option setting

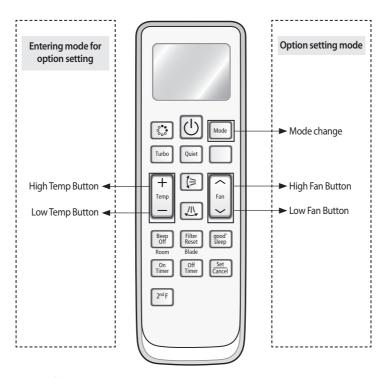

### Step 1. Entering mode to set option


- 1. Remove batteries from the remote controller.
- 2. Insert batteries and enter the option setting mode while pressing High Temp button and Low Temp button.



Check if you have entered the option setting status.

### Step 2. The procedure of option setting

After entering the option setting status, select the option as listed below.

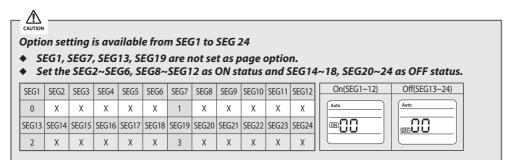


### Setting an indoor unit address and installation option(Cont.)

Option setting	Status
1. Setting SEG2, SEG3 option  Press Low Fan button( ∨ ) to enter SEG2 value.  Press High Fan button( ∧ ) to enter SEG3 value.  Each time you press the button, □ → □ → ··· □ → □ will be selected in rotation.	Auto OND SEG2 SEG3
2. Setting Cool mode Press Mode button to be changed to Cool mode in the ON status.	Cool
3. Setting SEG4, SEG5 option  Press Low Fan button(∨) to enter SEG4 value.  Press High Fan button(∧) to enter SEG5 value.  Each time you press the button, □→□→□→□ will be selected in rotation.	Cool  ON)  SEG4  SEG5
4. Setting Dry mode  Press Mode button to be changed to DRY mode in the ON status.	ON Dry
5. Setting SEG6, SEG8 option  Press Low Fan button( ∨ ) to enter SEG6 value.  Press High Fan button( ∧ ) to enter SEG8 value.  Each time you press the button, □ → □ → ··· □ → □ will be selected in rotation.	Dry  ON Dry  SEG6  SEG8
6. Setting Fan mode Press Mode button to be changed to FAN mode in the ON status.	COND CONTROL C
7. Setting SEG9, SEG10 option  Press Low Fan button( ∨ ) to enter SEG9 value.  Press High Fan button( ∧ ) to enter SEG10 value.  Each time you press the button, □ → □ → ···· □ → □ will be selected in rotation.	Fan  ON  SEG9  SEG10
8. Setting Heat mode Press Mode button to be changed to HEAT mode in the ON status.	Heat OND D
9. Setting SEG11, SEG12 option Press Low Fan button(∨) to enter SEG11 value. Press High Fan button(∧) to enter SEG12 value. Each time you press the button, □→□→…□→□ will be selected in rotation.	Heat ON SEG11  SEG12
10. Setting Auto mode  Press Mode button to be changed to AUTO mode in the OFF status.	Auto OFF CO
11. Setting SEG14, SEG15 option Press Low Fan button(∨) to enter SEG14 value. Press High Fan button(∧) to enter SEG15 value. Each time you press the button, ⊕ → ⊕ → ⊕ will be selected in rotation.	Auto OFF C SEG14  SEG15

Option setting	Status
12. Setting Cool mode Press Mode button to be change to Cool mode in the OFF status.	Cool
13. Setting SEG16, SEG17 option  Press Low Fan button(∨) to enter SEG16 value.  Press High Fan button(∧) to enter SEG17 value.  Each time you press the button, ☐ → ☐ → … ☐ → ☐ will be selected in rotation.	Cool OFF COOL SEG16 SEG17
14. Setting Dry mode Press Mode button to be change to Dry mode in the OFF status.	OFF CO
15. Setting SEG18, SEG20 option  Press Low Fan button(∨) to enter SEG18 value.  Press High Fan button(∧) to enter SEG20 value.  Each time you press the button, □→□→…□→□ will be selected in rotation.	SEG18 SEG20
16. Setting Fan mode  Press Mode button to be change to Fan mode in the OFF status.	Fan
17. Setting SEG21, SEG22 option  Press Low Fan button( $\lor$ ) to enter SEG21 value.  Press High Fan button( $\land$ ) to enter SEG22 value.  Each time you press the button, $\rightarrow \rightarrow \rightarrow$	SEG21 SEG22
18. Setting Heat mode Press Mode button to be change to HEAT mode in the OFF status.	Heat OFFICIAL HEAT
19. Setting SEG23, SEG24 mode  Press Low Fan button(∨) to enter SEG23 value.  Press High Fan button(∧) to enter SEG24 value.  Each time you press the button, □→□→⋯□→□ will be selected in rotation.	SEG23  Heat  Heat  SEG24

### Step 3. Check the option you have set

After setting option, press button to check whether the option code you input is correct or not.

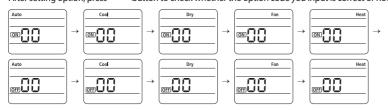

### Step 4. Input option

Press operation button (U) with the direction of remote control for set. For the correct option setting, you must input the option twice.


### Step 5. Check operation

- $1. \, Reset \, the \, indoor \, unit \, by \, pressing \, the \, RESET \, button \, of \, indoor \, unit \, or \, outdoor \, unit.$
- 2. Take the batteries out of the remote controller and insert them again and then press the operation button.

### Setting an indoor unit address and installation option (Cont.)

### Setting an indoor unit address (MAIN/RMC)

- 1. Check whether power is supplied or not.
  - When the indoor unit is not plugged in, there should be additional power supply in the indoor unit.
- 2. The panel(display) should be connected to an indoor unit to receive option.
- **3.** Before installing the indoor unit, assign an address to the indoor unit according to the air conditioning system plan.
- 4. Assign an indoor unit address by wireless remote controller.
  - The initial setting status of indoor unit ADDRESS(MAIN/RMC) is "0A0000-100000-200000-300000".

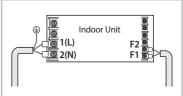

### Option No.: 0AXXXX-1XXXXXX-2XXXXXX-3XXXXXX

Option	SEG	1	SEG2		SEC	G3	SEC	G4	SEC	G5	SEG6	
Explanation	PAG	E	MODE		Setting Main address		100-digit of indoor unit address		10-digit of indoor unit		The unit digit of an indoor unit	
Remote Controller Display			Auto		Auto		Cool			Cool		
	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details
Indication					0	No Main address						
and Details	0		A		1	Main address setting mode	0~9	100-digit	0~9	10-digit	0~9	A unit digit
Option	SEG	7	SEC	68	SEC	G9	SEG	i10	SEG	i11	SEG	12
Explanation	PAG	E			Setting RMC address				Group cha	nnel(*16)	Group ac	ddress
Remote Controller Display						Fan			ONB	Heat		Heat
	Indication	Details	] - [		Indication	Details	_		Indication	Details	Indication	Details
Indication			No RMC address									
and Details	1				1	RMC address setting mode			RMC1 0~F		RMC2	0~F




- ♦ When "A"~"F" is entered to SEG5~6, the indoor unit MAIN ADDRESS is not changed.
- ♦ If you set the SEG 3 as 0, the indoor unit will maintain the previous MAIN ADDRESS even if you input the option value of SEG5~6.
- ♦ If you set the SEG 9 as 0, the indoor unit will maintain previous RMC ADDRESS even if you input the option value of SEG11~12.
- You cannot set SEG11 and SEG12 as F value at the same time.

### Setting an indoor unit installation option (suitable for the condition of each installation location)

- 1. Check whether power is supplied or not.
  - When the indoor unit is not plugged in, there should be additional power supply in the indoor unit.
- 2. The panel(display) should be connected to an indoor unit to receive option.
- 3. Set the installation option according to the installation condition of an air conditioner.
  - The default setting of an indoor unit installation option is "020010-100000- 200000-300000".
  - Individual control of a remote controller(SEG20) is the function that controls an indoor unit individually when there is more than one indoor unit.
- 4. Set the indoor unit option by wireless remote controller.



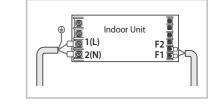


SEG1	SEG2	SEG3	SEG4	SEG5	SEG6
0	2	-	External room temperature sensor / Minimizing fan operation when thermostat is off	Central control	FAN RPM compensation
SEG7	SEG8	SEG9	SEG10	SEG11	SEG12
1	Drain pump	Hot water heater	-	EEV Step when heating stops	-
SEG13	SEG14	SEG15	SEG16	SEG17	SEG18
2	External control	External control output / External heater On or Off signal	S-Plasma ion	Buzzer	Number of hours using filter
SEG19	SEG20	SEG21	SEG22	SEG23	SEG24
3	Individual control of a remote controller	Heating setting compensation / Removing condensated water in heating mode	EEV Step of stopped unit during oil return/defrost mode	Motion detect sensor	-

- ◆ 1WAY/2WAY/4WAY MODEL: Drain pump(SEG8) will be set to 'USE + 3minute delay' even if the drain pump is set to 0.
- ◆ 1 WAY/2WAY/4WAY,DUCT MODEL: Number of hours using filter(SEG18) will be set to '1000hour' even if the SEG18 is set to except for 2 or 6.
- ♦ When setting the option other than above SEG values, the option will be set as "0".
- SEG5 central control option is basically set as 1 (Use), so you don't need to set the central control option additionally. However, if the central control is not connected but it doesn't indicate an error message, you need to set the central control option as 0 (Disuse) to exclude the indoor unit from the central control.

### Setting an indoor unit address and installation option (Cont.)

◆ The output of hot water heater in SEG9 is generated from the hot coil part of the terminal board in duct models.

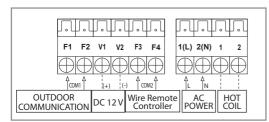

- \* The output of hot coil terminal is AC 220 V / 230 V (The same as Indoor Unit's input Power)
- ◆ The external output of SEG15 is generated by MIM-B14 connection. (Refer to the manual of MIM-B14.)

### ■ 02 series installation option(Detailed)

Option No.: 02XXXX-1XXXXX-2XXXXX-3XXXXX

Option	SEG	1	SE	G2	SEC	i3	SEG4			9	SEG5 SEG6		
Explanation	PAG	E	MC	DDE	Use of robot cleaning				perature sensor / when thermostat	Use of central control		FAN RPM compensation	
Remote Controller Display			Auto	}	Auto			Cool		ON -	8	ON)	
Indication	Indication	Details	Indication	Details	Indication	Details	Indication	Use of External room temperature sensor	room operation when thermostat is off		Details	Indication	Details
and Details							0	Disuse Disuse				0	Disuse
	0		1	2	0	Disuse	1	Use	Disuse	0	Disuse	1	RPM compensation
					1	Use	2	Disuse Use	Use (*1) Use (*1)	1	Use	2	High ceiling KIT
Option	SEG	7	SE	G8	SEC	<b>5</b> 9		SEG10		S	EG11	SE	EG12
Explanation	PAG	E	Use of dra	ain pump	Use of ho						when heating tops		
Remote Controller Display				Dry	<b>8</b>	Fan		Fan		(OX)		(ON)	
	Indication	Details	Indication	Details	Indication	Details	Indication	De	etails	Indication	Details	Indication	Details
			0	Disuse	0	Disuse				0	Default value		
Indication			1	Use	1	Use (*²)				1	Stopped Unit's Noise Decreasing Setting		
and Details	1				2							1	
and betains	1		2	When an indoor unit stops, drain pump will operate for 3min	3	Use ( <sup>'2</sup> )				2~B	Running Unit's Noise Decreasing Setting ( <sup>3</sup> )		

Option	SEG	13	SEG	14		S	EG15		SEC	G16		SEG17	EG17 SEG18		
Explanation	PAG	iΕ	Use of e		Sett		t of external control / ter On/Off signal		S-Plasi	ma ion	Bu	zzer control	Hours of	filter usage	
Remote Controller Display			Auto OFF 8			Auto	8		Cool	}		Cool	OFF B		
	Indication	Details	Indication	Details	Indication	Setting the output of external control	Details  External heater On/ Off signal	Inc	dication	Details	Indication	Details	Indication	Details	
Indication and			0	Disuse	0	Thermo on	-		0	Disuse	0	Use buzzer	2	1000 Hour	
Details			1	ON/OFF control	1	Operation on	-				1	Disuse buzzer			
	2		2	OFF control	2	-	Use (*4)		1	Use			6	2000 Hour	
			3	Window ON/OFF control	3	-	Use (*4)								
Option	SEG	19	SEG	20		S	EG21		SEC	G22		SEG23	SI	G24	
Explanation	PAG	Ε	Individual c					EEV Step of stopped unit during oil return/ defrost mode		Motion	n detect sensor		-		
Remote Controller Display			OFF B			OFF B	Fan		Fan		Heat OFF				
							Details								
	Indication	Details	Indication	Details	Indication	Heating Setting Compensation	Removing Condensated Water in Heating Mode	In	dication	Details	Indication	Details			
			0 or 1	channel 1	0	Default (*5)	Disuse		0	Default value	1	Disuse Turn out in 30min. without motion			
			2	channel 2	1	2℃	Disuse				2	Turn out in 60min. without motion			
			3	channel 3	2	5℃	Disuse				3	Turn out in 120min. without motion			
Indication and					3	Default (*5)	Use <sup>(*6)</sup>				4	Turn out in 180min. without motion			
Details	3				4	2℃	Use <sup>(*6)</sup>		1	Oil return or Noise decreasing	5	Turn out in 30min. without motion or *advanced function			
			4	channel 4					•	in defrost mode	6	Turn out in 60min. without motion or *advanced function			
					5	5℃	Use (*6)				7	Turn out in 120min. without motion or *ad- vanced function			
												8	Turn out in 180min. without motion or *ad- vanced function		

### Setting an indoor unit address and installation option (Cont.)

- \* Advanced function: Controlling cooling/heating current or power saving with motion detect.
- (\*1) Minimizing fan operation when thermostat is off
  - Fan operates for 20 seconds at an interval of 5 minutes in heat mode.
- (\*2) 1: Fan is turned on continually when the hot water heater is turned on,
  - 3: Fan is turned off when the hot water heater is turned on with cooling only indoor unit
  - Cooling only indoor unit: To use this option, install the Mode Select switch (MCM-C200) on the outdoor unit and fix it as cool mode.
- (\*3) It is only for wall-mounted indoor unit with EEV Integrated.

If any design condition meets either of the following below, please set SEG11 to "7".

- a) The total number of wall-mounted indoor units with EEV Integrated in one (modular) system is more than 20.
- b) The total number of wall-mounted indoor units with EEV Integrated in one (modular) system is more than "the total of one(modular) system's capacity(kW) / 2"
  - ("the total of one(modular) system's capacity(BTU/h) / 6800").
- ex) Outdoor capacity 28kW 28/2 = 14. The total number of wall-mounted indoor units with EEV Integrated in one (modular) system is more than 14.

Please refer to the EEV step table below for the system (for heating) at stop.

Indication			1	2	3	4	5	6	7	8	9	Α	В
Stopped Unit's	Wall Mounted With EEV	80	0	90	100	110	120	130	160	200	250	300	400
EEV step	Other Indoor Units except for wall mounted with EEV	Default	0					No Fu	nction				

- (\*4) When the following 2 or 3 is used as external heater On/Off signal, the signal for monitoring external contact control will not be output.
  - 2: Fan is turned on continually when the external heater is turned on,
  - 3: Fan is turned off when the external heater is turned on with cooling only indoor unit
  - Cooling only indoor unit: To use this option, install the Mode Select switch (MCM-C200) on the outdoor unit and fix it as cool mode.
- If Fan is set to off for cooling only indoor unit by setting the SEG9=3 or SEG15=3, you need to use an external sensor or wired remote
  controller sensor to detect indoor temperature exactly.
- (\*5) Default setting value
  - 4Way Cassette, Mini 4Way Cassette: 5 °C
  - Other indoor units: 2 °C
- (\*6) This function can be applied to 4 Way Cassette and Mini 4 Way Cassette only. If the air conditioner operates the heating mode immediately after finishing the cooling mode, the condensated water in the drain pan becomes water vapor by the heat of the indoor unit heat exchanger. Since the water vapor might be condensed on the indoor unit, which may fall into a living space, use this function to get rid of the water vapor out of the indoor unit by operating the fan (for maximum 20 minutes) even when the indoor unit is turned off after cooling mode is turned to heating mode.

### ■ 05 series installation option

SEG1	SEG2	SEG3	SEG4	SEG5	SEG6
0	5	Use of Auto Change Over for HR only in Auto mode	(When setting SEG3) Standard heating temp. Offset	(When setting SEG3) Standard cooling temp. Offset	(When setting SEG3) Standard for mode change Heating → Cooling
SEG7	SEG8	SEG9	SEG10	SEG11	SEG12
1	(When setting SEG3) Standard for mode change Cooling → Heating	(When setting SEG3) Time required for mode change	Compensation option for Long pipe or height difference between indoor units	-	-
SEG13	SEG14	SEG15	SEG16	SEG17	SEG18
2	-	-	-	-	Control variables when using hot water / external heater
SEG19	SEG20	SEG21	SEG22	SEG23	SEG24
3	-	-	-	-	-

### ■ 05 series installation option(Detailed)

### Option No.: 05XXXX-1XXXXX-2XXXXX-3XXXXX

Option	SEG1	SE	G2	SE	G3	SE	 G4	SEG5		SEG6	
Explanation	PAGE	MC	DE	Auto mode		Standard he Off	(When setting SEG3) Standard heating temp. Offset		ing SEG3) cooling Offset	(When setting SEG3) Standard for mode change Heating → Cooling	
Remote Controller Display		Auto		Auto ON E	3	Cool	}	Cool		Dry Dry	
	Indication Deta	s Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details
				0	Follow product option	0	0	0	0	0	1
			5			1	0.5	1	0.5	1	1.5
Indication						2	1	2	1	2	2
and Details 0	0	5			Use Auto	3	1.5	3	1.5	3	2.5
				1	Change Over for	4	2	4	2	4	3
					HR only	5	2.5	5	2.5	5	3.5
						6	3	6	3	6	4
						7	3.5	7 3.5		7	4.5
Option	SEG7	SE	G8	SE	G9	SEC	510	SEG	11	SEG	i12
Explanation	PAGE	Standa	tting SEG3) lard for change Heating (When setting SEG3) Time required for mode change		for Long pip diffference	tion option be or height between r units					
Remote Controller Display			ry	m8	Fan		Fan				
	Indication Deta	s Indication	Details	Indication	Details	Indication	Details				
		0	1	0	5 min.	0	Use default value				
		1	1.5	1	7 min.		1) Height				
		2	2	2	9 min.		difference <sup>1)</sup> is more				
Indication and Details	1	3	2.5	3	11 min.	1	than 30m or 2) Distance <sup>2)</sup> is longer than 110m				
		4	3	4	13 min.						
		5	3.5	5	15 min.		1) Height difference <sup>1)</sup>				
		6	4	6	20 min.	2	is 15~30m				
		7	4.5	7	30 min.	2	or 2) Distance <sup>2)</sup> is 50~110m				

### Setting an indoor unit address and installation option (Cont.)

Option	SEG13	SEG14	SEG15	SEG16	SEG17		SEG18 <sup>(*3)</sup>							
Explanation						Con	Control variables when using hot water / external heater							
Remote Controller Display							Dry GER							
						lu di sati su	Details							
						Indication	Set temp. for heater On/Off	Delay time for heater On						
						0	At the same time as thermo on	No delay						
						1	At the same time as thermo on	10 minutes						
						2	At the same time as thermo on	20 minutes						
						3	1.5 ℃	No delay						
						4	1.5 ℃	10 minutes						
1 12 22						5	1.5 ℃	20 minutes						
Indication and Details						6	3.0 ℃	No delay						
Details	2					7	3.0 ℃	10 minutes						
						8	3.0 ℃	20 minutes						
						9	4.5 ℃	No delay						
						Α	4.5 ℃	10 minutes						
						В	4.5 ℃	20 minutes						
						С	6.0 ℃	No delay						
						D	6.0 ℃	10 minutes						
						Е	6.0 ℃	20 minutes						

(\*1) Height difference: The difference of the height between the corresponding indoor uint and the indoor unit installed at the lowest place.

For example, When the indoor unit is installed 40m higher than the indoor unit installed at the lowest place, select the option "1".

(\*2) Distance: The difference between the pipe length of the indoor unit istalled at farthest place from an outdoor unit and the pipe length of the corresponding indoor unit from an outdoor unit.

For example, when the farthest pipe length is 100 m and the corresponding indoor unit is 40 m away from an outdoor unit, select the option "2".

(100 - 40 = 60 m)

(\*3) Heater operation when the SEG9 of 02 series installation option is set to using hot water heater or when SEG15 is set to using external heater


- e.g. 1) Setting 02 series SEG9 ="1"/ Setting 05 series SEG18 = "0": Hot water heater is turned on at the same time as the heating thermostat is on, and turned off when the heating thermostat is off.
- e.g. 2) Setting 02 series SEG15 ="2" / Setting 05 series SEG18 ="A":

Room temp.  $\leq$  set temp. + f(heating compensation temp.)

- External heater is turned on when the temperature is maintained as  $4.5\,^{\circ}\text{C}$  for 10 minutes. Room temp. > set temp. + f(heating compensation temp.)
- External heater is turned off when the temperature is maintained as 4.5  $^{\circ}$ C + 1  $^{\circ}$ C (1  $^{\circ}$ C is the Hysteresis for On/Off selection.)

### SEG 3, 4, 5, 6, 8, 9 additional information

When the SEG 3 is set as "1" and follow Auto Change Over for HR only operation, it will operate as follows.

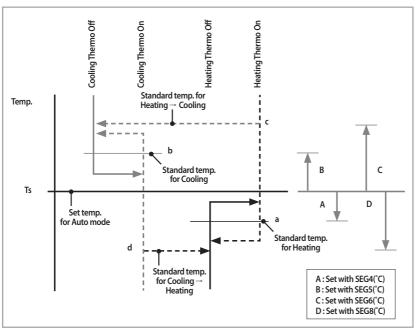

Cooling/Heating mode can be changed when Thermo Off status is maintained during the time with SEG9.

### Changing a particular option

You can change each digit of set option.

Option	SEG1		SEG1 SEG2		SEG3		SEG4		SEG5		SEG6	
Explanation	PAGE		MODE		The option mode you want to change		The tens' digit of an option SEG you will change		The unit digit of an option SEG you will change		The changed value	
Remote Controller Display			Auto ON D		Auto				Cool		Dry ON B	
	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details
Indication and Details	0		D		Option mode	1~6	Tens' digit of SEG	0~9	Unit digit of SEG	0~9	The changed value	0~F

### Note

- When changing a digit of an indoor unit address setting option, set the SEG3 as 'A'.
- When changing a digit of indoor unit installation option, set the SEG3 as '2'.

Ex) When setting the 'buzzer control' into disuse status.

Option	SEG1	SEG2	SEG3	SEG4	SEG5	SEG6
Explanation	PAGE	MODE	The option mode you want to change	The tens' digit of an option SEG you will change		The changed value
Indication	0	D	2	1	7	1

### QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT	COUNTRY	CALL	OR VISIT US ONLINE AT	
	0800-SAMSUNG (0800-7267864)				www.samsung.com/ua/support	
AUSTRIA	[Only for Premium HA] 0800-366661	www.samsung.com/at/support	UKRAINE	0-800-502-000	(Ukrainian)	
	[Only for Dealers] 0810-112233				www.samsung.com/ua_ru/support (Russian)	
		www.samsung.com/be/support (Dutch)	MOLDOVA	0-800-614-40	www.samsung.com/support	
BELGIUM	02-201-24-18	www.samsung.com/be_fr/support	U.A.E	800-SAMSUNG (800 - 726 7864)	sumsung.com/support	
		(French)	OMAN	800-SAMSUNG (800 - 726 7864)	www.samsung.com/ae/support	
BOSNIA	055 233 999	www.samsung.com/support	KUWAIT	183-CALL (183-2255)	(English)	
	*3000 Цена в мрежата		BAHRAIN	8000-GSAM (8000-4726)	www.samsung.com/ae_ar/support	
BULGARIA	0800 111 31 , Безплатна телефонна	www.samsung.com/bg/support	QATAR	800-CALL (800-2255)	(Arabic)	
CROATIA	линия 072 726 786	www.samsung.com/hr/support	Q/II/III	08000-726786		
CZECH	800 - SAMSUNG (800-726786)	www.samsung.com/cz/support	EGYPT	16580	www.samsung.com/eg/support	
DENMARK	70 70 19 70	www.samsung.com/dk/support	ALGERIA	3004	www.samsung.com/n_africa/support	
FINLAND	030-6227 515	www.samsung.com/fi/support	PAKISTAN	0800-Samsung (72678)		
FRANCE	01 48 63 00 00	www.samsung.com/fr/support	-	-	www.samsung.com/pk/support	
	0180 6 SAMSUNG bzw.		TUNISIA	80 1000 12	www.samsung.com/n_africa/support	
	0180 6 7267864*		JORDAN	0800-22273		
	(*0,20 €/Anruf aus dem dt. Festnetz, aus dem			06 5777444	www.samsung.com/levant	
GERMANY	Mobilfunk max. 0,60 €/Anruf) [HHP] 0180 6 M SAMSUNG bzw.	www.samsung.com/de/support	SYRIA	962 5777444		
	0180 6 67267864*		IRAN	021-8255 [CE]	www.samsung.com/iran/suppor	
	(*0,20 €/Anruf aus dem dt. Festnetz, aus dem			021-42132 [HHP]		
	Mobilfunk max. 0,60 €/Anruf)		MOROCCO	080 100 22 55	www.samsung.com/n_africa/	
CYPRUS	8009 4000 only from landline, toll free				support www.samsung.com/sa/home	
	80111-SAMSUNG (80111 726 7864) only from	unusus american com/av/cumport	SAUDI ARABIA	800 247 3457 (800 24/7 HELP)	www.samsung.com/sa_en	
GREECE	land line	www.samsung.com/gr/support				
	(+30) 210 6897691 from mobile and land line		TURKEY	444 77 11	www.samsung.com/tr/support	
HUNGARY	0680SAMSUNG (0680-726-786)	www.samsung.com/hu/support	ARGENTINE	0800-555-SAMSUNG(7267)	www.samsung.com/ar	
TALLA.	0680PREMIUM (0680-773-648)		URUGUAY	0800-SAMS(7267)	www.samsung.com/uy	
LUXEMBURG	800-SAMSUNG (800.7267864) 261 03 710	www.samsung.com/it/support www.samsung.com/be_fr/support	PARAGUAY	0800-11-SAMS(7267)	www.samsung.com/py	
MONTENEGRO	020 405 888	www.samsung.com/support		0800-124-421 (Demais cidades e regiões)	1	
SLOVENIA	080 697 267 (brezplačna številka)	www.samsung.com/si	BRAZIL	4004-0000 (Capitais e grandes centros)	www.samsung.com/br/suppor	
NETHERLANDS	· · · · · · · · · · · · · · · · · · ·	www.samsung.com/nl/support	CHILE	800-SAMSUNG(726-7864)	www.camcung.com/cl/cupport	
NORWAY	815 56480	www.samsung.com/no/support		[HHP] 02-24828200	www.samsung.com/cl/support	
	801-172-678* lub +48 22 607-93-33*	SAMS	BOLIVIA	800-10-7260	www.samsung.com/cl/support	
	Dedykowana infolinia do obsługi zapytań	0/11110	COLOMBIA	Bogotá en el 600 12 72		
POLAND	dotyczących telefonów komórkowych:	www.samsung.com/pl/support		Sin costo en todo el pais 01 8000 112 112	www.samsung.com/co/suppo	
	801-672-678* lub +48 22 607-93-33*			Y desde tu celular #726		
	* (koszt połączenia według taryfy operatora)		COSTA RICA	00-800-1-SAMSUNG (726-7864)		
PORTUGAL	808 20 7267	www.samsung.com/pt/support	COSITTILET	374VISONG (720 700-1)		
	*8000 (apel in retea)		DOMINICAN	1 000 751 2676	www.samsung.com/latin/support	
ROMANIA	08008-726-78-64 (08008-SAMSUNG)	www.samsung.com/ro/support	REPUBLIC	1-800-751-2676	(Spanish)	
	Apel GRATUIT		ECUADOR	1-800-SAMSUNG (72-6786)	www.samsung.com/latin_en/support (English)	
SERBIA	011 321 6899	www.samsung.com/rs/support	EL SALVADOR	8000-SAMSUNG (726-7864)	(Erigisii)	
SLOVAKIA	0800 - SAMSUNG(0800-726 786)	www.samsung.com/sk/support	GUATEMALA	1-800-299-0033		
SPAIN	0034902172678	www.samsung.com/es/support	HONDURAS	800-2791-9111		
CWEDEN	[HHP] 0034902167267	unusus america e am lea leura art	JAMAICA	1-800-SAMSUNG (726-7864)	www.samsung.com/latin_en/support	
SWEDEN	0771 726 7864 (0771-SAMSUNG)	www.samsung.com/se/support www.samsung.com/ch/support	NICADACIIA	001 900 5077367	(English)	
		www.sumsung.com/cm/support	NICARAGUA	001-800-5077267	www.samsung.com/latin/support	
SWITZERLAND		(German)	DANIANA	200 0101	www.samsung.com/ratin/support	
JWIIZEREAND	0800 726 78 64 (0800-SAMSUNG)	(German) www.samsung.com/ch fr/support	PANAMA	800-0101	(Spanish)	
JWIIZEREAND	0800 726 78 64 (0800-SAMSUNG)	(German) www.samsung.com/ch_fr/support (French)	PUERTO RICO	800-0101 1-800-682-3180	(Spanish) - www.samsung.com/latin_en/support	
U.K	0800 726 78 64 (0800-SAMSUNG) 0330 SAMSUNG (7267864)	www.samsung.com/ch_fr/support	PUERTO RICO TRINIDAD &		(Spanish)	
U.K	0330 SAMSUNG (7267864)	www.samsung.com/ch_fr/support (French) www.samsung.com/uk/support	PUERTO RICO	1-800-682-3180 1-800-SAMSUNG(726-7864)	(Spanish) - www.samsung.com/latin_en/support	
U.K EIRE	0330 SAMSUNG (7267864) 0818 717100	www.samsung.com/ch_fr/support (French) www.samsung.com/uk/support www.samsung.com/ie/support	PUERTO RICO TRINIDAD &	1-800-682-3180	(Spanish) - www.samsung.com/latin_en/support	
U.K EIRE LITHUANIA	0330 SAMSUNG (7267864) 0818 717100 8-800-77777	www.samsung.com/ch_fr/support (French) www.samsung.com/uk/support www.samsung.com/ie/support www.samsung.com/lt/support	PUERTO RICO TRINIDAD & TOBAGO	1-800-682-3180 1-800-SAMSUNG(726-7864) 080077708 Desde teléfonos fijos ó	(Spanish) www.samsung.com/latin_en/support (English) www.samsung.com/pe/support	
U.K EIRE	0330 SAMSUNG (7267864) 0818 717100	www.samsung.com/ch_fr/support (French) www.samsung.com/uk/support www.samsung.com/ie/support	PUERTO RICO TRINIDAD & TOBAGO	1-800-682-3180 1-800-SAMSUNG(726-7864) 080077708 Desde teléfonos fijos ó públicos	(Spanish) www.samsung.com/latin_en/support (English) www.samsung.com/pe/support www.samsung.com/latin/support	
U.K EIRE LITHUANIA	0330 SAMSUNG (7267864) 0818 717100 8-800-77777	www.samsung.com/ch_fr/support (French) www.samsung.com/uk/support www.samsung.com/ie/support www.samsung.com/lt/support	PUERTO RICO TRINIDAD & TOBAGO	1-800-682-3180 1-800-SAMSUNG(726-7864) 080077708 Desde teléfonos fijos ó públicos 7116800 Desde teléfonos celulares	(Spanish) www.samsung.com/latin_en/support (English)  www.samsung.com/pe/support  www.samsung.com/latin/support (Spanish)	
U.K EIRE LITHUANIA LATVIA	0330 SAMSUNG (7267864) 0818 717100 8-800-77777 8000-7267	www.samsung.com/ch_fr/support (French) www.samsung.com/uk/support www.samsung.com/ie/support www.samsung.com/lt/support www.samsung.com/lv/support	PUERTO RICO TRINIDAD & TOBAGO PERU VENEZUELA	1-800-682-3180  1-800-5AMSUNG(726-7864)  080077708 Desde teléfonos fijos ó públicos 7116800 Desde teléfonos celulares  0-800-SAMSUNG (726-7864)	(Spanish) www.samsung.com/latin_en/support (English) www.samsung.com/pe/support www.samsung.com/latin/support (Spanish) www.samsung.com/latin_en/support (English)	
U.K EIRE LITHUANIA LATVIA ESTONIA	0330 SAMSUNG (7267864) 0818 717100 8-800-77777 8000-7267 800-7267 8-800-555-55-55 (VIP care 8-800-555-	www.samsung.com/ch_fr/support (French) www.samsung.com/uk/support www.samsung.com/le/support www.samsung.com/lt/support www.samsung.com/lv/support www.samsung.com/ee/support	PUERTO RICO TRINIDAD & TOBAGO  PERU	1-800-682-3180 1-800-SAMSUNG(726-7864) 080077708 Desde teléfonos fijos ó públicos 7116800 Desde teléfonos celulares 0-800-SAMSUNG (726-7864) 1300 362 603	(Spanish) www.samsung.com/latin_en/support (English) www.samsung.com/pe/support www.samsung.com/latin/support (Spanish) www.samsung.com/latin_en/support	
U.K EIRE LITHUANIA LATVIA ESTONIA RUSSIA	0330 SAMSUNG (7267864) 0818 717100 8-800-77777 8000-7267 800-7267 8-800-555-55-55 (VIP care 8-800-555-55-88) 0-800-555-555	www.samsung.com/ch_fr/support (French) www.samsung.com/uk/support www.samsung.com/le/support www.samsung.com/lt/support www.samsung.com/lv/support www.samsung.com/ee/support www.samsung.com/ru/support	PUERTO RICO TRINIDAD & TOBAGO PERU VENEZUELA	1-800-682-3180  1-800-5AMSUNG(726-7864)  080077708 Desde teléfonos fijos ó públicos 7116800 Desde teléfonos celulares  0-800-SAMSUNG (726-7864)  1300 362 603  1-800-10-726-7864 [ PLDT Toll Free ]	(Spanish) www.samsung.com/latin_en/support (English) www.samsung.com/pe/support www.samsung.com/latin/support (Spanish) www.samsung.com/latin_en/support (English)	
U.K EIRE LITHUANIA LATVIA ESTONIA RUSSIA GEORGIA ARMENIA	0330 SAMSUNG (7267864) 0818 717100 8-800-77777 8000-7267 8-800-555-55-55 (VIP care 8-800-555-55-88) 0-800-555-555 0-800-05-555	www.samsung.com/ch_fr/support (French) www.samsung.com/uk/support www.samsung.com/le/support www.samsung.com/lt/support www.samsung.com/le/support www.samsung.com/ee/support www.samsung.com/ru/support www.samsung.com/support	PUERTO RICO TRINIDAD & TOBAGO PERU VENEZUELA	1-800-682-3180  1-800-5AMSUNG(726-7864)  080077708 Desde teléfonos fijos ó públicos 7116800 Desde teléfonos celulares  0-800-SAMSUNG (726-7864)  1300 362 603  1-800-10-726-7864 [ PLDT Toll Free ] 1-800-8-726-7864 [ Globe Landline and	(Spanish) www.samsung.com/latin_en/support (English) www.samsung.com/pe/support www.samsung.com/latin/support (Spanish) www.samsung.com/latin_en/support (English)	
U.K EIRE LITHUANIA LATVIA ESTONIA RUSSIA GEORGIA ARMENIA AZERBAIJAN	0330 SAMSUNG (7267864) 0818 717100 8-800-77777 8000-7267 8-800-555-55-55 (VIP care 8-800-555-55-88) 0-800-555-555 0-800-05-555 0-88-555-55-55	www.samsung.com/ch_fr/support (French) www.samsung.com/uk/support www.samsung.com/le/support www.samsung.com/lt/support www.samsung.com/ee/support www.samsung.com/ru/support www.samsung.com/support www.samsung.com/support www.samsung.com/support	PUERTO RICO TRINIDAD & TOBAGO  PERU  VENEZUELA  AUSTRALIA	1-800-682-3180  1-800-SAMSUNG(726-7864)  080077708 Desde teléfonos fijos ó públicos 7116800 Desde teléfonos celulares  0-800-SAMSUNG (726-7864)  1300 362 603  1-800-10-726-7864 [ PLDT Toll Free ] 1-800-8-726-7864 [ Globe Landline and Mobile ]	(Spanish)  www.samsung.com/latin_en/support (English)  www.samsung.com/pe/support  www.samsung.com/latin/support (Spanish)  www.samsung.com/latin_en/support (English)  www.samsung.com/au/support	
U.K EIRE LITHUANIA LATVIA ESTONIA RUSSIA GEORGIA	0330 SAMSUNG (7267864) 0818 717100 8-800-77777 8000-7267 8-800-555-55-55 (VIP care 8-800-555-55-88) 0-800-555-555 0-800-05-555	www.samsung.com/ch_fr/support (French) www.samsung.com/uk/support www.samsung.com/le/support www.samsung.com/lt/support www.samsung.com/le/support www.samsung.com/ee/support www.samsung.com/ru/support www.samsung.com/support	PUERTO RICO TRINIDAD & TOBAGO  PERU  VENEZUELA  AUSTRALIA  PHILIPPINES	1-800-682-3180  1-800-5AMSUNG(726-7864)  080077708 Desde teléfonos fijos ó públicos 7116800 Desde teléfonos celulares  0-800-SAMSUNG (726-7864)  1300 362 603  1-800-10-726-7864 [ PLDT Toll Free ] 1-800-8-726-7864 [ Globe Landline and Mobile ] 02-422-2111 [ Standard Landline ]	(Spanish)  www.samsung.com/latin_en/support (English)  www.samsung.com/pe/support  www.samsung.com/latin/support (Spanish)  www.samsung.com/latin_en/support (English)  www.samsung.com/au/support  www.samsung.com/ph/support	
U.K EIRE LITHUANIA LATVIA ESTONIA RUSSIA GEORGIA ARMENIA AZERBAIJAN	0330 SAMSUNG (7267864) 0818 717100 8-800-77777 8000-7267 8-800-555-55-55 (VIP care 8-800-555-55-88) 0-800-555-555 0-800-05-555 0-88-555-55-55	www.samsung.com/ch_fr/support (French) www.samsung.com/uk/support www.samsung.com/le/support www.samsung.com/lt/support www.samsung.com/ee/support www.samsung.com/ru/support www.samsung.com/support www.samsung.com/support www.samsung.com/support	PUERTO RICO TRINIDAD & TOBAGO  PERU  VENEZUELA  AUSTRALIA	1-800-682-3180  1-800-5AMSUNG(726-7864)  080077708 Desde teléfonos fijos ó públicos 7116800 Desde teléfonos celulares  0-800-SAMSUNG (726-7864)  1300 362 603  1-800-10-726-7864 [ PLDT Toll Free ] 1-800-8-726-7864 [ Globe Landline and Mobile ] 02-422-2111 [ Standard Landline ] 1800-SAMSUNG(726-7864)	(Spanish)  www.samsung.com/latin_en/support (English)  www.samsung.com/pe/support  www.samsung.com/latin/support (Spanish)  www.samsung.com/latin_en/support (English)  www.samsung.com/au/support	
U.K EIRE LITHUANIA LATVIA ESTONIA RUSSIA GEORGIA ARMENIA AZERBAIJAN KAZAKHSTAN UZBEKISTAN	0330 SAMSUNG (7267864)  0818 717100  8-800-77777  8000-7267  8-800-555-55-55 (VIP care 8-800-555-55-88)  0-800-555-555  0-800-05-555  0-80-05-555  8-10-800-50-55-500 (GSM: 7799, VIP care 7700)  00-800-500-55-500 (GSM: 7799)	www.samsung.com/ch_fr/support (French) www.samsung.com/uk/support www.samsung.com/le/support www.samsung.com/le/support www.samsung.com/le/support www.samsung.com/ee/support www.samsung.com/ru/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support	PUERTO RICO TRINIDAD & TOBAGO  PERU  VENEZUELA  AUSTRALIA  PHILIPPINES	1-800-682-3180  1-800-SAMSUNG(726-7864)  080077708 Desde teléfonos fijos ó públicos 7116800 Desde teléfonos celulares  0-800-SAMSUNG (726-7864)  1300 362 603  1-800-10-726-7864 [PLDT Toll Free ] 1-800-8-726-7864 [Globe Landline and Mobile ] 02-422-2111 [Standard Landline ] 1800-SAMSUNG(726-7864)	(Spanish)  www.samsung.com/latin_en/support (English)  www.samsung.com/pe/support  www.samsung.com/latin/support (Spanish)  www.samsung.com/latin_en/support (English)  www.samsung.com/au/support  www.samsung.com/ph/support	
U.K EIRE LITHUANIA LATVIA ESTONIA RUSSIA GEORGIA ARMENIA AZERBAIJAN KAZAKHSTAN UZBEKISTAN KYRGYZSTAN	0330 SAMSUNG (7267864)  0818 717100  8-800-77777  8000-7267  8-800-555-55-555 (VIP care 8-800-555-55-88)  0-800-555-555  0-80-05-555  8-10-800-505-5500 (GSM: 7799, VIP care 7700)  00-800-500-55-500 (GSM: 7799)  00-800-500-55-500 (GSM: 9977)	www.samsung.com/ch_fr/support (French) www.samsung.com/uk/support www.samsung.com/le/support www.samsung.com/le/support www.samsung.com/le/support www.samsung.com/ee/support www.samsung.com/ru/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support	PUERTO RICO TRINIDAD & TOBAGO  PERU  VENEZUELA  AUSTRALIA  PHILIPPINES	1-800-682-3180  1-800-5AMSUNG(726-7864)  080077708 Desde teléfonos fijos ó públicos 7116800 Desde teléfonos celulares  0-800-5AMSUNG (726-7864)  1300 362 603  1-800-10-726-7864 [PLDTToll Free]  1-800-8-726-7864 [Globe Landline and Mobile]  02-422-2111 [Standard Landline]  1800-5AMSUNG(726-7864)  1-800-10-726-7864 [PLDTToll Free]  1-800-8-726-7864 [Globe Landline]	(Spanish)  www.samsung.com/latin_en/support (English)  www.samsung.com/pe/support  www.samsung.com/latin/support (Spanish)  www.samsung.com/latin_en/support (English)  www.samsung.com/au/support  www.samsung.com/ph/support	
U.K EIRE LITHUANIA LATVIA ESTONIA RUSSIA GEORGIA ARMENIA AZERBAIJAN KAZAKHSTAN UZBEKISTAN KYRGYZSTAN TAJIKISTAN	0330 SAMSUNG (7267864)  0818 717100  8-800-77777  8000-7267  8-800-555-5555 (VIP care 8-800-555-55-88)  0-800-05-555  0-88-555-555  8-10-800-500-55-500 (GSM: 7799, VIP care 7700)  00-800-500-55-500 (GSM: 7799)  00-800-500-55-500 (GSM: 9977)  8-10-800-500-55-500	www.samsung.com/ch_fr/support (French) www.samsung.com/uk/support www.samsung.com/le/support www.samsung.com/le/support www.samsung.com/le/support www.samsung.com/ee/support www.samsung.com/ru/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support	PUERTO RICO TRINIDAD & TOBAGO  PERU  VENEZUELA  AUSTRALIA  PHILIPPINES  SINGAPORE	1-800-682-3180  1-800-5AMSUNG(726-7864)  080077708 Desde teléfonos fijos ó públicos 7116800 Desde teléfonos celulares  0-800-SAMSUNG (726-7864)  1300 362 603  1-800-10-726-7864 [ PLDT Toll Free ]  1-800-8-726-7864 [ Globe Landline and Mobile ]  02-422-2111 [ Standard Landline ]  1800-SAMSUNG(726-7864)  1-800-10-726-7864 [ PLDT Toll Free ]  1-800-8-726-7864 [ PLDT Toll Free ]	(Spanish) www.samsung.com/latin_en/support (English)  www.samsung.com/pe/support  www.samsung.com/latin/support (Spanish) www.samsung.com/latin_en/support (English) www.samsung.com/au/support  www.samsung.com/ph/support  www.samsung.com/ps/support	
U.K EIRE LITHUANIA LATVIA ESTONIA RUSSIA GEORGIA ARMENIA AZERBAIJAN KAZAKHSTAN UZBEKISTAN KYRGYZSTAN	0330 SAMSUNG (7267864)  0818 717100  8-800-77777  8000-7267  8-800-555-55-555 (VIP care 8-800-555-55-88)  0-800-555-555  0-80-05-555  8-10-800-505-5500 (GSM: 7799, VIP care 7700)  00-800-500-55-500 (GSM: 7799)  00-800-500-55-500 (GSM: 9977)	www.samsung.com/ch_fr/support (French) www.samsung.com/uk/support www.samsung.com/le/support www.samsung.com/le/support www.samsung.com/le/support www.samsung.com/ee/support www.samsung.com/ru/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support www.samsung.com/support	PUERTO RICO TRINIDAD & TOBAGO  PERU  VENEZUELA  AUSTRALIA  PHILIPPINES  SINGAPORE	1-800-682-3180  1-800-5AMSUNG(726-7864)  080077708 Desde teléfonos fijos ó públicos 7116800 Desde teléfonos celulares  0-800-5AMSUNG (726-7864)  1300 362 603  1-800-10-726-7864 [PLDTToll Free]  1-800-8-726-7864 [Globe Landline and Mobile]  02-422-2111 [Standard Landline]  1800-5AMSUNG(726-7864)  1-800-10-726-7864 [PLDTToll Free]  1-800-8-726-7864 [Globe Landline]	(Spanish)  www.samsung.com/latin_en/support (English)  www.samsung.com/pe/support  www.samsung.com/latin/support (Spanish)  www.samsung.com/latin_en/support (English)  www.samsung.com/au/support  www.samsung.com/ph/support  www.samsung.com/ph/support	



Wall Mounted Type Series

AM\*\*\*FNTD\*\*\*
AM\*\*\*FNQD\*\*\*

# Air Conditioner user manual

### imagine the possibilities

Thank you for purchasing this Samsung product.



(E) (E) (F) (T) (P) (D) (E) (N) (P) (H) (R) DB68-03633A-10

**SAMSUNG**